




Toshiba Satellite L305D-S5950 CD Drive Replacement

This guide will illustrate how to replace the CD drive of a Toshiba Satellite L305D-S5950 laptop.

Written By: William

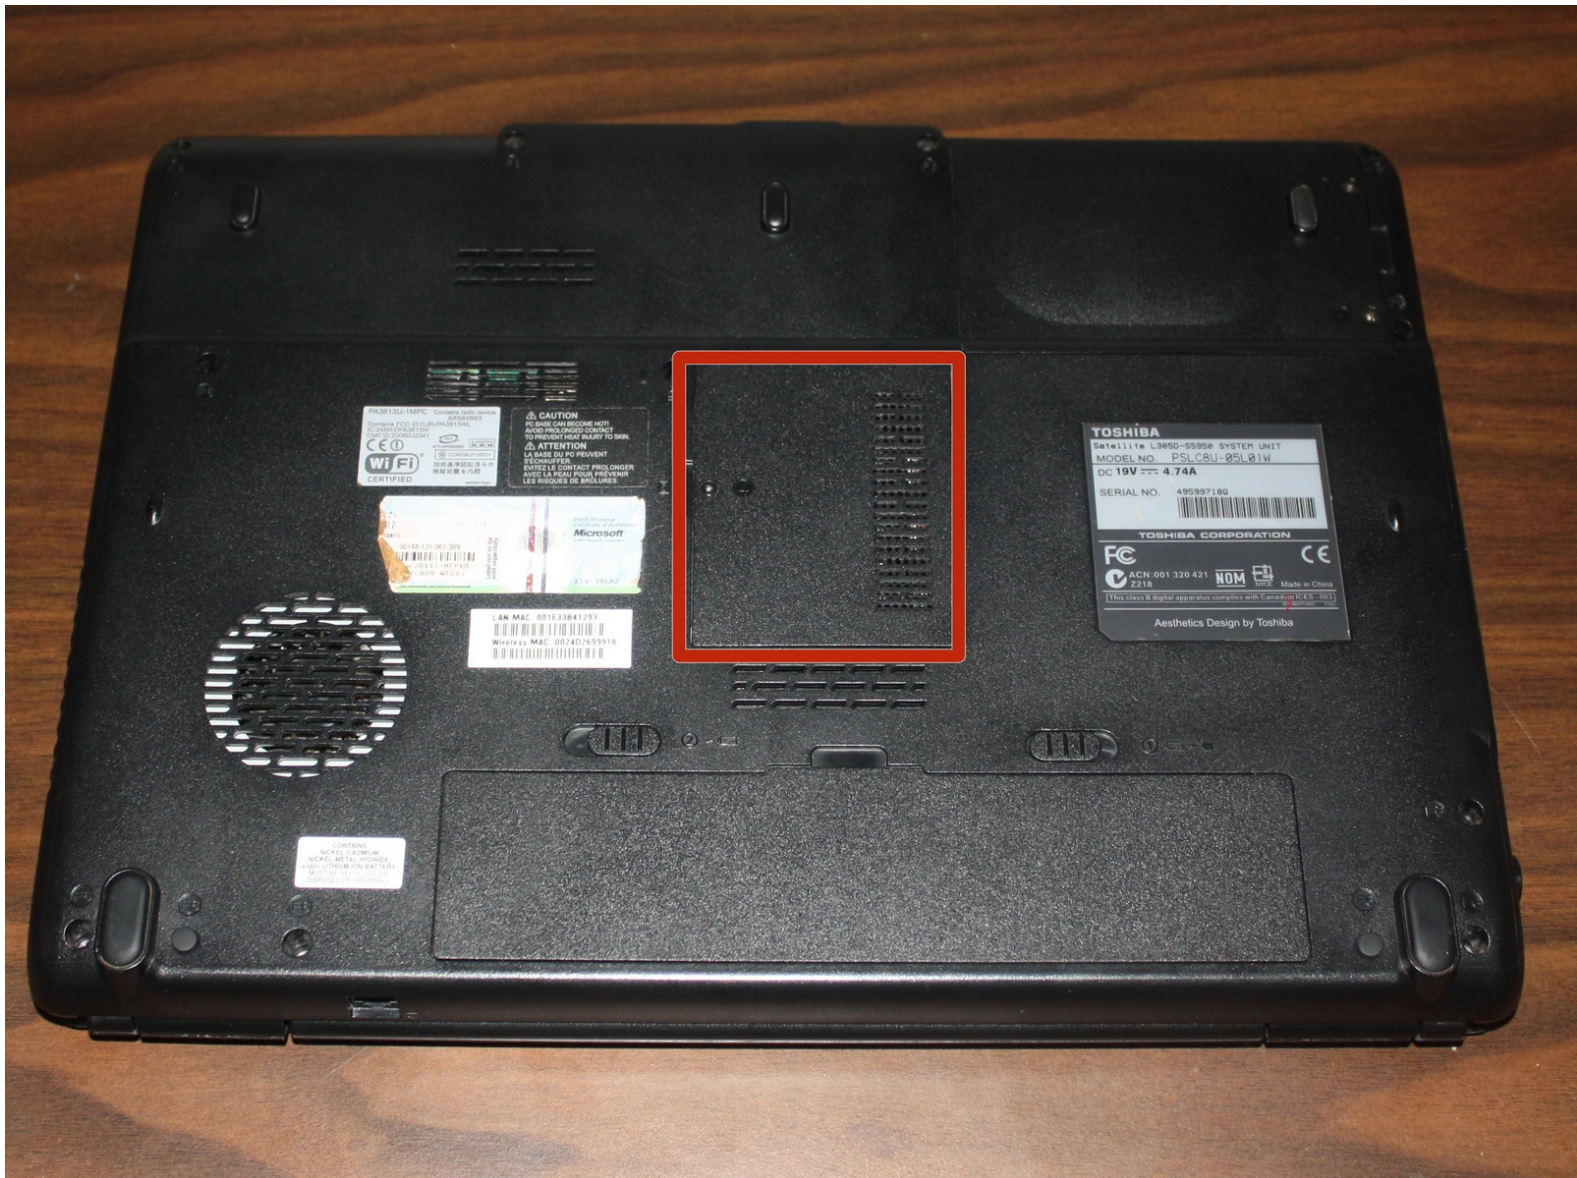



TOOLS:

- [Spludger](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Battery





- Locate the two sliding battery locks on the underside of the laptop.

Step 2



- Locate the right battery lock and slide it to the right.

Step 3

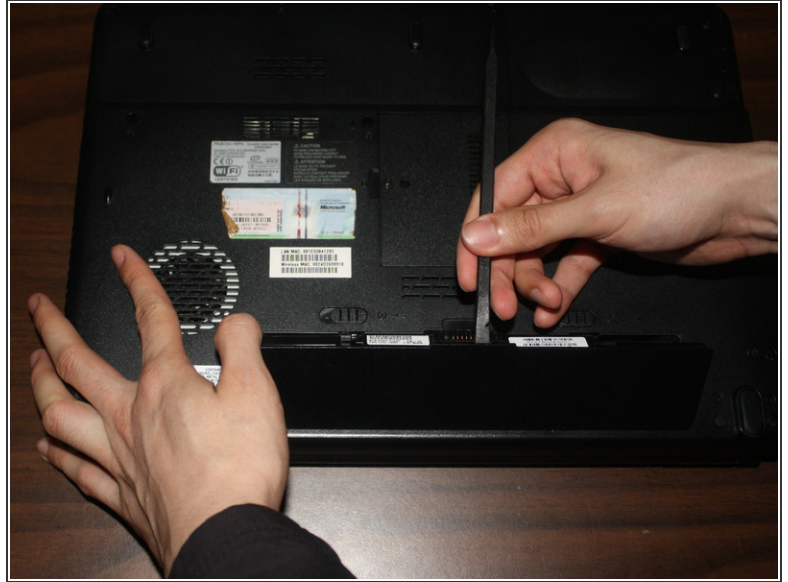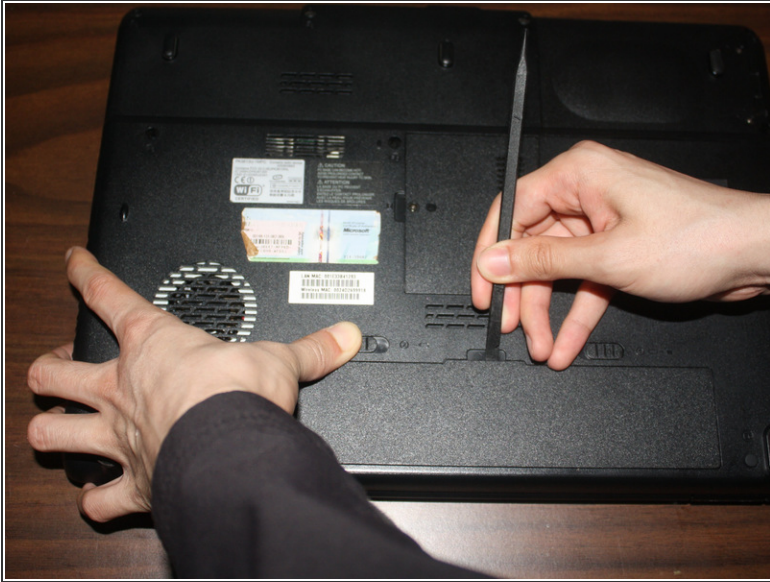

- While holding the left battery lock to the left, lift up the battery using the tab located on the top center of the battery.

Step 4



- Remove the battery from the laptop.

Step 5 — CD Drive





- Locate the RAM cover on the underside of the laptop.

Step 6



- Use a phillips head #0 screwdriver to remove the screw located on the RAM cover.

Step 7

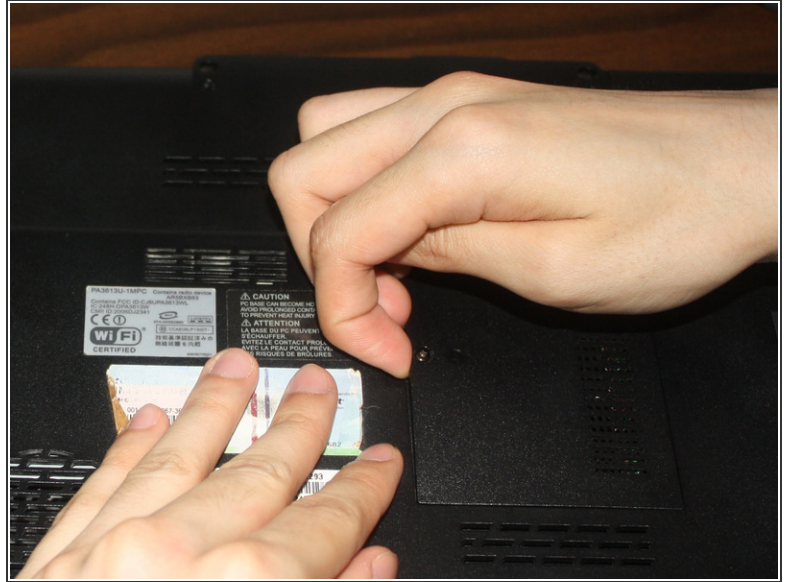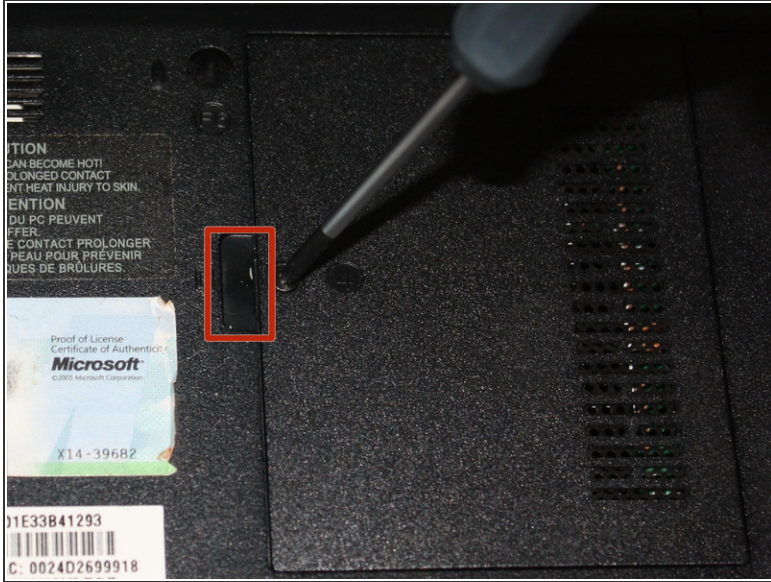

- Using your fingers, carefully remove the cover.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-08-03 09:21:34 AM.